


vCamMX-2+

Quick Guide V1.0

vCamMX-2+ Playback, Camera Lights and On-screen Keyboard Controls

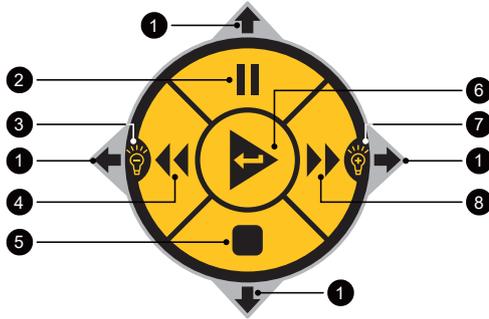

1	Keyboard Navigation	Use the buttons corresponding to the top, right, bottom, and left arrows to navigate the on-screen keyboard. Then, navigate to and press the Done or Step Back key to save the changes.
2	Pause and Resume	Use this button while recording or playing a video to pause and resume the video.
3	Lower Camera Lights	Lower the camera lights while viewing or recording.
4	Rewind	Rewind the video during playback.
5	Stop	Stop the recording or playing the video.
6	Enter Button	Press while in File Manager to play a selected video.
7	Raise Camera Lights	Raise the camera lights while viewing or recording.
8	Fast Forward	Fast forward the playing video.

Control Box Buttons

	On/Off Button	Press and release to turn the unit on. When on, this button will glow green. Press and hold to turn the unit off.
	Distance reset	Press this button to reset the distance counter to zero. A confirmation message will appear on the screen.
	Microphone	Press to turn on and off. The button will glow red, and an icon will appear in the status bar. The internal microphone is located at the top center above the screen.
	Sonde	Press to turn on and off. When on the button glows green and the frequency shows in the status bar. The frequency will change with each button press and then turn off.
	Record	Press to start a recording. While recording, the button glows red, and the record icon flashes in the status bar. Press again to end the recording.
	Picture	Press to take a JPEG picture. A message will appear on the screen to confirm the picture capture.
	Zoom	Press to enter the digital zoom mode. Press up to three times for levels of zoom. The zoom level will show in the status bar.
	Playback and Camera lights	Use the Left/Right Arrow section to increase or lower the camera lights. Use the Pause/Resume button to pause and resume a recording or playing video. Use these buttons to navigate the on-screen keyboard, using the center Enter button to select letters or numbers.

LCD Keypad Buttons

	Step Back / ESC	Press to return to the previous screen or exit an operation.
	Karat choice keys	Press to make a selection while in various menus.
	Enter	Press when required to complete an action. Also, press to hide and show the main menu bar while viewing or recording.

Make a Video Recording or JPEG Picture

	Press to start a recording. While recording, the button glows red, and the record icon flashes in the status bar. Press again to end the recording.
	Press to take a JPEG picture. A message will appear on the screen to confirm the picture capture.


Main On-Screen Menu

	Files	Press to enter the File Manager to manage video and picture files.
	Display	Press to access the LCD settings.
	OSD	Press to change the colors and position of the OSD.
	Lights	Press to enter the camera lights submenu.
	Setup	Press to enter the settings sub menu.

Playing, Copying and Deleting Files

 	<p>Press to enter the File Manager.</p> <p>Then select the storage options of SD or USB.</p>
	<p>Scroll - Use the Up/Down Scroll keys to highlight the desired file.</p>
	<p>Select - Press the Select key to select individual files or press Select All to select all the files.</p>
	<p>Play - After selecting the file press the Play key to play the file.</p>
	<p>Copy - After selecting the file(s) press the Copy key and then select the destination of USB or SD.</p>
	<p>Delete - After selecting the file(s) press the Delete key and then confirm the deletion by pressing Yes.</p>

vCamMX-2+ File Manager Screen

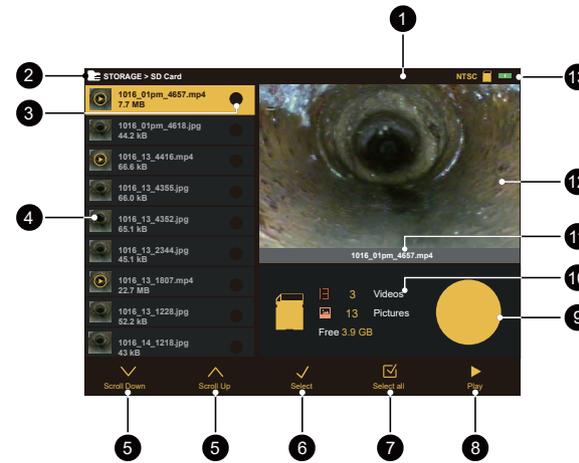

1	Status bar
2	Menu and sub-menu location
3	File(s) select status
4	File list
5	Scroll keys
6	Select file(s) key
7	Select all file keys (Copy key) Note: *When multiple files are selected, the Select All and Play keys are replaced by Copy and Delete keys.
8	Play key (Delete key)
9	Free and used USB drive or SD card space
10	File count on SD Card or USB drive
11	Active file name
12	Preview window
13	System information

Use the vCam Mobile Controller app to record on a tablet or smartphone, add text to the screen, and instantly share files.



The VMC app is available from the Apple App or Google Play sites.



iOS



Android

Vivax-Metrotech Corp. (Headquarters)
3251 Olcott Street, Santa Clara, CA 95054, USA

T/Free: 1-800-446-3392
Tel: +1-408-734-3880
Fax: +1-408-734-1415
Email: SalesUSA@vxmt.com
Website: www.vivax-metrotech.com

Visit us at www.vivax-metrotech.com to view our full product line and worldwide locations.